



LIST OF PARTS

- | | | | |
|----|--|----|---------------------------------|
| 1 | Frame | 25 | Front Sight |
| 2 | Slide | 26 | Main Spring Strut |
| 3 | Barrel | 27 | Main Spring Plug |
| 4 | Slide Stop | 28 | Sear Pin |
| 5 | Magazine | 29 | Hammer Pin |
| 6 | Insert - Front | 30 | Trigger Pin |
| 7 | Insert - Rear | 31 | Magazine Catch Plug |
| 8 | Trigger | 32 | Main Spring Plug Pin |
| 9 | Trigger Bar | 33 | Extractor Pin |
| 10 | Sear | 34 | Magazine Catch Pin |
| 11 | Hammer | 35 | Insert - Front Pin |
| 12 | Disconnecter | 36 | Pin |
| 13 | Firing Pin Block Lever | 37 | Firing Pin Plug |
| 14 | Trigger Bar Disconnecter | 38 | Recoil Spring Guide |
| 15 | Ejector | 39 | Recoil Spring |
| 16 | Firing Pin | 40 | Extractor Spring |
| 17 | Extractor | 41 | Firing Pin Spring |
| 18 | Firing Pin Block Stop | 42 | Firing Pin Block Stop Spring |
| 19 | Magazine Catch | 43 | Spring (2x) |
| 20 | Safety - Left * | 44 | Slide Stop Spring Pin |
| 21 | Safety - Right * | 45 | Main Spring |
| 22 | Hammer Decocking Lever
Controller - Left * | 46 | Trigger Spring |
| 23 | Hammer Decocking Lever
Controller - Right * | 47 | Slide Stop Spring |
| 24 | Rear Sight | 48 | Hammer Decocking Lever Spring * |
| | | 49 | Trigger Bar Spring |
| | | 50 | Sear Spring |
| | | 51 | Insert - Rear Pin |

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.